



Warranty and Inspection Requirements & Procedures

TRP Roofing Products offers **Limited Product Warranties** (Material Only) and **Limited Full System Warranties** (Labor & Material). All warranties require the completion and submissions of the Warranty Application Form to initiate the process, and adherence to the TRP Care & Maintenance Guidelines.

Each TRP Roofing Products Warranty is specific to a single property address and a single TRP Roofing Products Fluid-Applied Roof Coating System. If your project includes multiple buildings or multiple systems, a separate Warranty Application Form must be submitted for each building or installed system.

A. LIMITED PRODUCT WARRANTY (Material Only)

TRP Roofing Products offers a **Limited Product Warranty (Material Only)** for all our Fluid Applied Roof Coatings. There is no additional fee for this Material Only warranty. The warranty term is specific to the Fluid Applied System as shown in the table below.

#911 Acrylic Elastomeric Coating = 12 Year Limited Material Warranty
#921 Acrylic Elastomeric Coating = 10 Year Limited Material Warranty
#901 Acrylic Elastomeric Coating = 5 Year Limited Material Warranty
#924 High Solids Silicone Coating = 10, 15- or 20-Year Limited Material Warranty
#923 Solvent Based Silicone Coating = 10, 15- or 20-Year Limited Material Warranty

The requirement for the issuance of a Limited Material Only Warranty is:

1. Submission of Material Only Warranty Application Form.
(<https://www.tropicalroofingproducts.com/products/warranty>)
2. Proof of purchase (invoices) from a TRP Roofing Products Authorized Distributor.
3. Products must be installed/applied according to issued specification and/or published application guidelines.
4. Submission of digital pictures documenting scope of work in accordance with specification/application guidelines.

Note: TRP Roofing Products may not inspect Material Only Warranty projects.

B. LIMITED SYSTEM WARRANTY (Material & Labor)

TRP Roofing Products offers **Limited Material & Labor Warranties in 10, 15 and 20-Year Terms** based on the following fee schedule and requirements:

Term [=] Years	Acrylic [=] \$/sq ft	Silicone [=] \$/sq ft	Minimum Fee [=] \$
10	\$0.10 per sq. ft.	\$0.13 per sq. ft.	\$1,500
15	\$0.12 per sq. ft.	\$0.16 per sq. ft.	\$2,000



20	N/A*	\$0.20 per sq. ft.	\$3,000
----	------	--------------------	---------

1. Submission of Material and Labor Warranty Application Form.
(<https://www.tropicalroofingproducts.com/products/warranty>)
2. Proof of purchase from a TRP Roofing Products Authorized Distributor.
3. Products must be applied by a TRP Roofing Products Approved Contractor, licensed, and insured by standards of governing the scope of work.
4. Products must be installed/applied according to issued specification and/or published application guidelines. (See www.tropicalroofingproducts.com)
5. Application must be inspection by a TRP Roofing Products Technical Sales Manager as follows:
 1. Substate Inspection – Prior to state of job
 2. Final Inspection – Upon project completion
6. All CARE & MAINTENANCE GUIDELINES must be followed.

****Warranties nearing expiration may be extended after inspection and any necessary repairs and restoration are completed satisfactorily. Warranties may be “transferrable” if request is in writing and roof passes inspection.***

Inspection Procedures: TRP Roofing Products Technical Sales Manager is available to make the necessary site inspections, as needed, to inspect the application stages before the application may continue. Number of inspections may vary depending on job type, contractor experience, project characteristics, and other factors. It shall be the responsibility of the contractor to notify TRP Roofing Products in advance of these scheduled times to enable the inspections and provide safe access as per governing standards. The contractor shall be responsible for ensuring a weather-tight building for the entire duration of the project. Next day inspections cannot be guaranteed, please schedule accordingly. Manufacturer warranties are issued only after a project has been issued a specification, manufacturer inspections are completed, warranty requirements are satisfied, and project is completed.

TERMS AND CONDITIONS Warranty Disclaimer

- (A.) Notification of contract award (Warranty Application Form) from the Approved Roofing Contractor must be received at least fourteen (14) days prior to start of application of roofing on all Warranted jobs.



- (B.) Receipt and acknowledgement of this notice does not obligate TRP Roofing Products to issue warranty on the roof unless all conditions of the TRP Roofing Products warranty program for the completed roofing system are strictly complied with.
- (C.) Acceptance of this application warranty in no way will diminish any responsibility of the roofing contractor including being responsible for all labor costs for the first two-years of the warranty term.
- (D.) Approved Contractor agrees to give TRP Roofing Products notice of exact dates when work begins and is completed.
- (E.) TRP Roofing Products assumes no responsibility for specification, construction, or design of the building including the roof system except as stated in the roofing warranty.
- (F.) This application must be authorized and signed by an officer or owner of the Approved contracting company.
- (G.) Approved Contractor agrees to install the TRP Roofing Products roofing system in accordance with the current TRP Roofing Products selected specifications.
- (H.) Approved Contractor agrees to adhere to the TRP Care & Maintenance Guidelines including documentation of all inspections and repairs. See next page for full Care & Maintenance Guidelines that can be also located at www.tropicalroofingproducts.com

TRP Care and Maintenance Program

In order to ensure that your TRP Roofing Products roof coating will continue to perform to its fullest, and to maintain you warranty, you must follow, implement and satisfy this Care and Maintenance program.



- A. Maintain a file for all records relating to this roof, including the TRP Roofing Products agreements, reports, invoices, repair and maintenance bills, original drawings, and specifications, etc.
- B. Inspect the roof and coating at least twice each year, typically in the spring and fall. The most common areas of damage or distress are at drainage points, penetrations, perimeter flashings and in traffic areas.
- C. Inspect for damage from the elements after severe weather conditions, such as hailstorms, heavy rains, high winds, etc.
- D. Arrange for prompt repairs necessary to correct non-guaranteed conditions affecting the roof surface. Repairs to the surface must be promptly performed by a TRP Roofing Products Approved contractor with approved products and repair methods that are consistent with the type and quality of the warranted coating so that such repairs will last as long as the TRP Roofing Products Coating.
- E. Regularly remove any debris, such as leaves, branches, dirt, rocks, bottles, refuse, that may accumulate on the roof surface. Clean gutters, downspouts, scuppers, and surrounding roof areas to ensure proper drainage.
- F. Examine all metal flashings, counter-flashings, expansion joints, and pitch pockets for rust, detachment, deteriorated sealant, and damage. Reattach loose metalwork. Replace sealant as necessary. Prepare and paint rusted surfaces.
- G. Examine masonry walls and copings for cracks, bad mortar joints, deteriorated sealant, loose masonry/coping stones, and indications of water absorption. Repair all such conditions to prevent water infiltration.
- H. Examine rooftop equipment such as air conditioners, ductwork, gooseneck vents, powered ventilators, evaporative coolers, antennas, equipment screens, skylights, satellite dishes, etc. for excessive movement, spillage of coolant, condensation, oil, grease, water/liquid release, etc., and damage to sheet metal cabinets and rubber or fabric gaskets that may



allow water infiltration. Employ, keep and maintain drainage systems for release of water, etc. from rooftop equipment to avoid surface water buildup. Keep all rooftop equipment in good condition.

- I. Regularly examine for any cracks, blistering, or flaking. Promptly contact TRP Roofing Products regarding any such cracks, blistering, or flaking and recoat/repach any such areas with approved TRP products.
- J. Minimize rooftop traffic. Establish paths which confine roof traffic to designated areas only. Service personnel should take care to avoid dropping tools, equipment, parts, etc. on the roof surface. Service personnel should not make any penetrations of or repairs to the coating. All work affecting the coating must be performed by an Approved TRP Roofing Products contractor.

This TRP Roofing Products Care and Maintenance information is intended to address conditions commonly found on buildings. Other conditions may exist that require special maintenance considerations. It is the responsibility of the Building Owner to ensure that the Care and Maintenance program followed for a particular building is adequate, given that building's specific condition.